



# HP Compaq nc8430 Ram Replacement

This guide will show you how to remove the RAM from a HP Compaq nc8430.

Written By: bryan ingram




## INTRODUCTION

This guide will show you how to remove the RAM from a HP Compaq nc8430.



## Step 1 — Battery

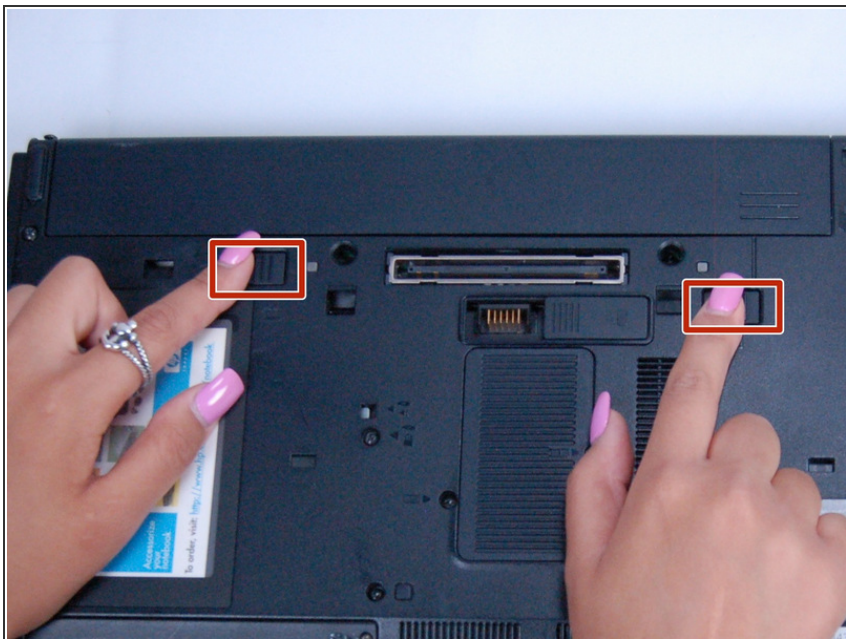

- ⚠ Completely shut down the device and unplug any adapters and cords connected to the device.
- Carefully flip the device over so that the bottom is facing up.
- Slide both of the latches to the left.

## Step 2



- Slide up against the three lines the battery has.

### Step 3



- Slide the battery up and away from the laptop.

⚠ Slowly remove the battery to prevent any connectors from getting damaged.

### Step 4 — Remove Ram cover



⚠ Completely shut down the device and unplug any adapters and chords that are connected.

- Carefully flip the device over so that the bottom is facing up.




## Step 5




- Use a screwdriver to remove the single screw on the covering located on the back of the laptop.

## Step 6 — Locate Ram

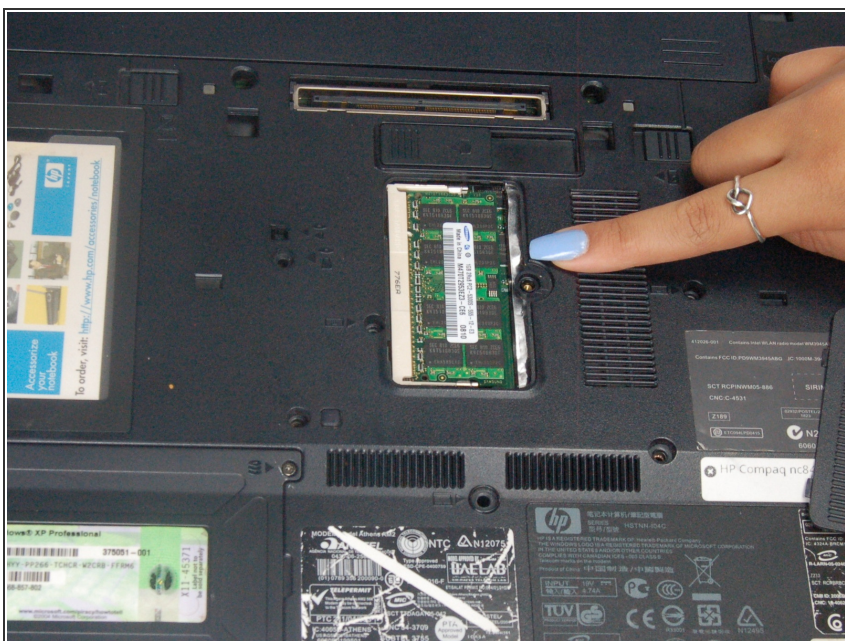


- Locate the ram after you remove the covering.

## Step 7 — Push clamps aside

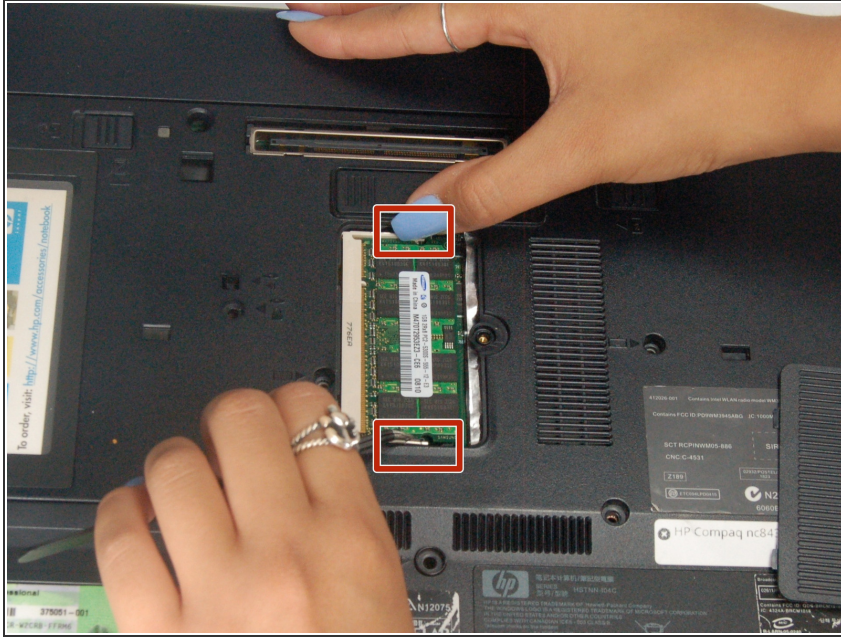

- Use fingers or tools to press the clamps that hold the ram in to the side.


## Step 8 — Pull Ram up to remove

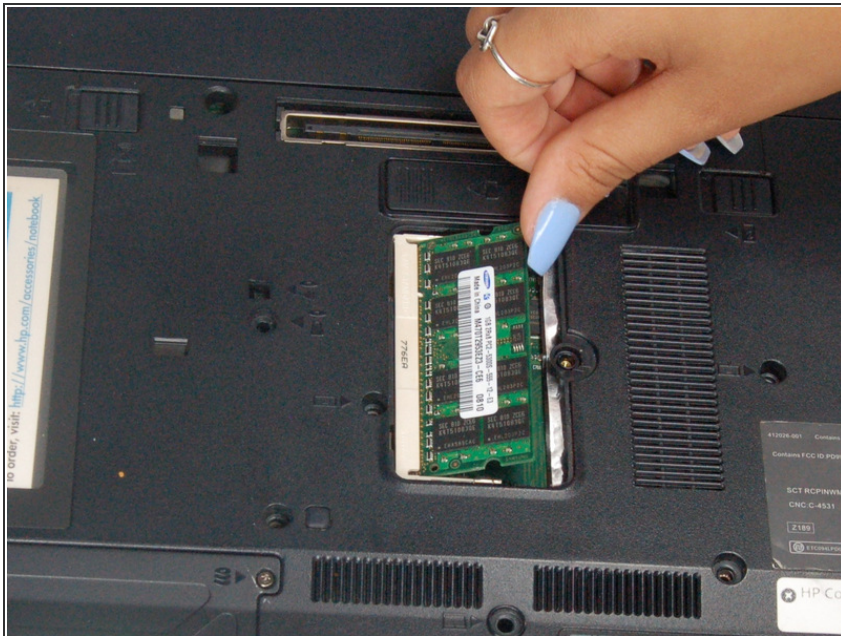

- Place your fingers firmly on the ram and pull it up.



## Step 9 — Remove Ram

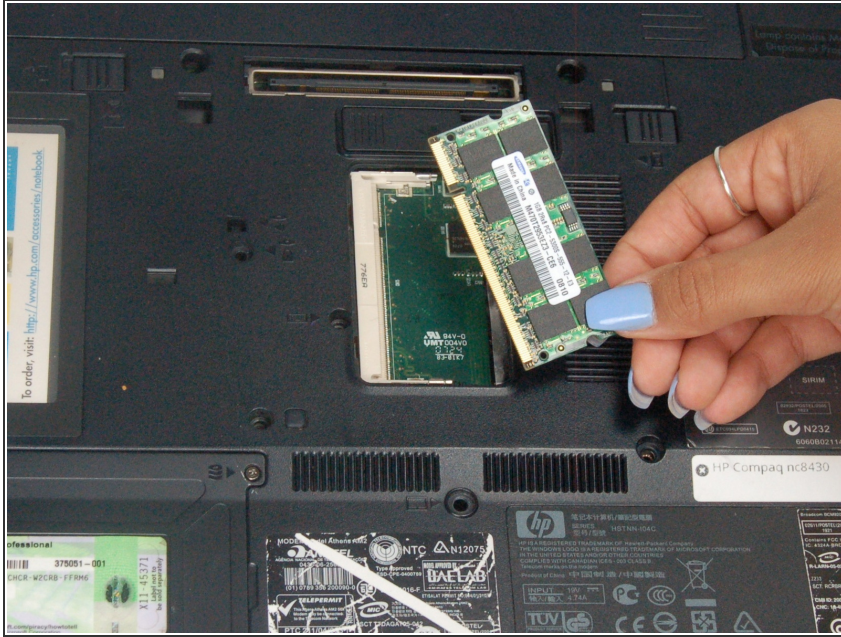

- Place fingers firmly on ram and pull it to remove it.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 03:28:00 PM.